



## Canon Type 2 lens chart

For Canon with 1:6 sensor

Camera lens	18407 9.25" dome	18405 8" dome Port	Dome Shade	18409 6" dome port	Zoom (Z) or Focus (F) GEAR	
	EXTENSION	EXTENSION		EXTENSION		Dome Shade
Canon EF 14mm f/2.8	18453	18453	18480	NR	(F)18713	
Canon EF 15mm f/2.8 Fisheye	Not Needed	Not Needed	18480	Not Needed	18484	(F)18702
Canon EF 20mm f/2.8	18456	18456	18480	18456	18484	(F)18714
Canon EF-S 10-22mm f/3.5-4.5	18453	18453	18480	18462	18484	(Z)18706
Canon EF 16-35mm f/2.8 Type I & II	18457	18457	18480	NR		(Z)18708
Canon EF 17-40mm F/4	18457	18457	18480	NR		(Z) 18709
Canon EF-S 17-85mm f/4-5.6 IS	18453	18453	18480	NR		(Z) 18707
Canon EF-S 18-55 f/3.5-5.6	18456	18463	18480	18463	18484	(Z)18703
Sigma 10-20mm F4-5.6 EX DC HSM	18453	18456	18480	18453	18484	(Z)18698
Sigma 14mm F2.8 EX ASPHERICAL HSM	18462	18462	18480	NR		(F)18697
Sigma 15mm F2.8 FISHEYE	Not Needed	Not Needed	18480	Not Needed	18484	(F)18715
Sigma 15-30mm F3.5-4.5 EX DG	18457	18457	18480	NR		(Z)18698
Sigma 17-70mm F2.8-4.5 DC MACRO	18462	18462	18480	18457	18484	(Z)18716
Tokina AT-X 10-17mm F3.5-4.5 AF DX fisheye	18456	18456	18480	18463	18484	(Z)18717
Tokina AT-X 12-24mm F4 AF PRO DX	18453	18453	18480	NR		(Z)18722
NR = This lens not recommended for use with this port						
(*1) +3 diopter needed for 8" dome port & a +4 diopter needed for 6" dome port						
(*2) Older pre 2008 port may not fit due to the oversized nature of this lens.						
Macro lenses	Port 18428 Auto Focus only		Port 18426 Auto & manual focus		For use with port 18426 only	
Canon EF 50mm F2.8	18453		18453		(F)18705	
Canon EF-S 60mm F2.8	Not needed		Not needed		(F)18710	
Canon EF 100mm f/2.8	18453		18453		(F)18700	
Sigma 50mm F2.8 EX MACRO	Not needed		Not needed		(F)18701	