


AQUATICA™

Digital

Lens chart for Aquatica housing for Nikon
(For Nikon D300s, D2x, D40/D40x/D60, D100 & Fuji S2 pro)

TYPE 1

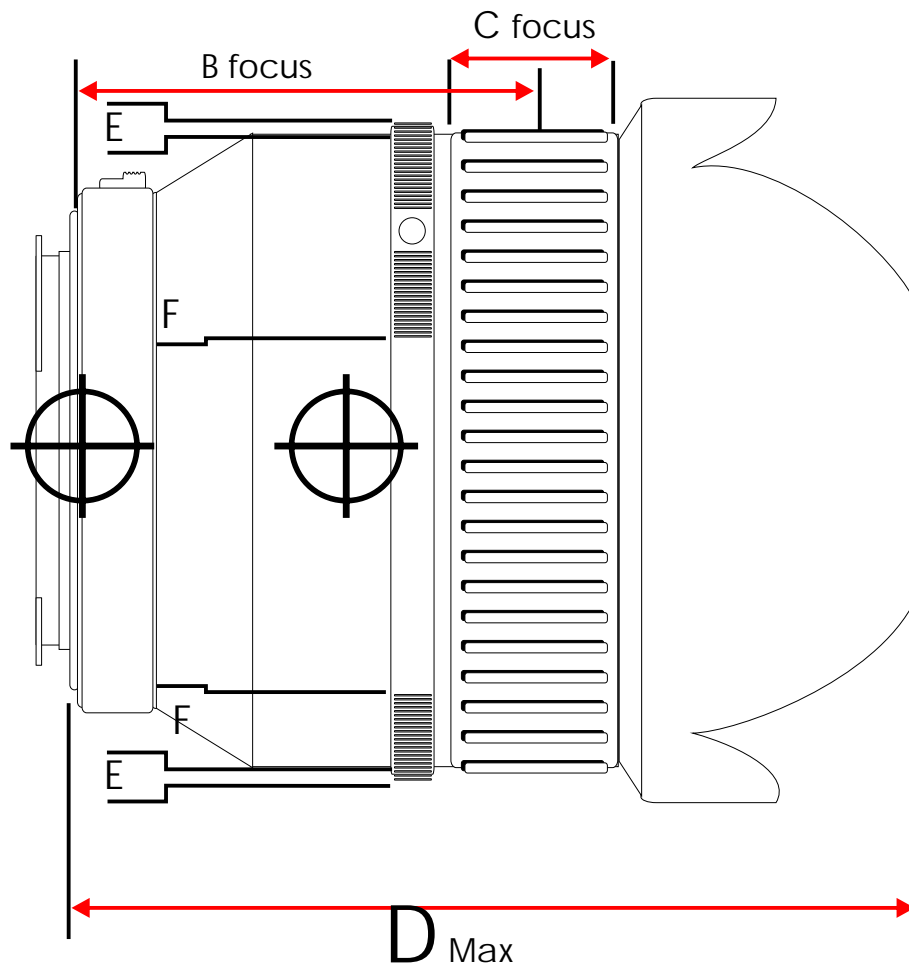

AQUATICA™ TYPE 1 FOR NIKON

Digital

For Nikon D300s, D2x, D40/D40x, D70/D70s, D100 & Fuji S2 Pro

4" dome port lens chart (# 18410)

Camera Lens	18405 8" dome Port		Zoom (Z)
	EXTENSION	Dome Shade	Focus (F) GEAR
Nikon AF 10,5mm f/2,8 G ED DX Fisheye	Not needed	Built in	(F) 18699
Nikon AF-D 16mm f/2,8 Fisheye	Not usable (*2)		
Sigma 10mm F2.8 EX DC HSM Fisheye	Not usable (*1)		
Sigma 15mm f/2.8 Fisheye	Not usable (*1)		
Tokina AT-X 10-17mm f/3.5-4.5 AF DX Fisheye	18456	Built in	(Z) 18722
Tokina AT-X 10-17mm f/3.5-4.5 AF DX Fisheye + 1.4x converter	18453	Built in	(Z) 18731

(*1) Due to the length of the lens shade, it is impossible to use this lens with the # 18410 dome port

(*2) Due to the minimum focusing distance being too far, it is impossible to use this lens with the # 18410 dome port

Macro port lens chart (# 18426 & 18428)

The 18426 AF/MF Macro Port is equipped with a focus knob that allows manual focusing when combined with a focus gear on the lens

The 18428 AF Macro port was designed to be operated in Autofocus mode

Camera Lens	18428 & 18426	18426	18428
	EXTENSION	GEAR	GEAR
Nikon AF Micro 60mm F2.8 (*3)	Not needed	(F)18670/(*)18682	Use in AF only
Nikon AF-S Micro 60mm f/2.8G ED NEW	Not needed	(F) 18728	Use in AF only
Nikon AF-S Micro 85mm f/3.5 G ED VR NEW	Not Needed	(F) 18728	Use in AF only
Nikon AF Micro 105mm F2.8 (*4)	18453	(F)18679/(*)18683	Use in AF only
Nikon AF-S Micro 105MM f/2.8 G ED-IF VR, NEW	18453	(F)18712.1	Use in AF only
Nikon AF Micro 200mm F/4 D	18454	(F)18656	Use in AF only
Nikon AF Micro 70-180 mm f/4.5-5.6D ED	18454	(F)18691/(Z)18692	Use in AF only
Sigma 50mm F2.8 EX MACRO	Not needed	(F)18701	Use in AF only

(*3) Auto/manual focus selector available 18682, (*4) Auto/manual focus selector available 18683

AQUATICA™

Digital

TYPE 1 FOR NIKON

For Nikon D300s, D2x, D40x, D70/D70s, D100 & Fuji S2 Pro

6" dome port lens Chart (#18409)			
Camera Lens	EXTENSION	Dome Shade	GEAR Zoom (Z) or Focus (F)
Nikon AF 10,5mm f/2,8 G ED DX	Not needed	18484	(F)18699
Nikon AF 14mm f/2.8D ED	NR		
Nikon AF 16mm f/2.8 D	Not needed	18484	(F)18689
Nikon AF 18mm f/2.8	NR		
Nikon AF 20mm f/2.8	Not needed	18484	(F)18674
Nikon AF 24mm f/2.8 D	Not needed	18484	(F)18686
Nikon AF 28mm f/2.8 D	Not needed	18484	(F)18686
Nikon AF-S 10-24mm f/4G IF-ED DX	NR		
Nikon AF-S 12-24mm f/4G IF-ED DX	NR		
Nikon AF-S 14-24mm f/2.8G ED NIKKOR (*2)	NR		
Nikon AF-S 16-35mm f/4 G ED VR DX	NR		
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX (*1)	18457	18484	(Z) 18696
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX II (*1)	18457	18484	(Z) 18729
Nikon AF-S 17-35mm f/2,8D IF-ED	NR		
Nikon AF-S 17-55MM f/2.8 ED-IF	NR		
Nikon AF 18-35mm f/3.5-4.5 D IF ED	18453	18484	(Z)18694
Nikon AF 18-55mm f/3.5-5.6G ED VR	18463	18484	(Z) 18721
Nikon AF 18-55mm f/3.5-5.6G ED II	18463	18484	(Z) 18718
Nikon AF 18-70mm f/:3,5-4,5 G ED (*1)	18453	18484	(Z)18696
Nikon AF-S 18-105mm f/3.5-5.6G ED VR (*1)	NR		
Nikon AF 20-35mm f/2.8 D (*1)	18453	18484	(Z)18675
Nikon AF 24-50mm f/3.3-4.5 D (*1)	18453	18484	(Z)18673
Nikon AF-S 24-70mm f/2.8 G	NR		
Nikon AF-S 28-70mm f/2.8 D (*1)	NR		
Nikon AF 28-70mm f/3.5-4.5 D (*1)	18453	18484	(Z)18673
Nikon AF 28-85mm f/3.5-4.5 (*1)	18462	18484	(Z)18675
Sigma 10-20mm f/3.5 EX DC HSM	18453	18484	(Z)18770
Sigma 10-20mm f/4-5.6 EX DC HSM	18453	18484	(Z)18698
Sigma 14mm f/2.8 EX ASPHERICAL HSM	NR		
Sigma 15mm f/2.8 FISHEYE	Not needed	18484	(F)18715
Sigma 15-30mm f/3.5-4.5 EX DG	NR		
Sigma 17-70mm f/2.8-4.5 DC MACRO HSM	18462	18484	(Z)18719
Sigma 17-70mm f/2.8-4.5 DC MACRO HSM (OS)	18462	18484	(Z)18719
Sigma 17-70mm f/2.8-4.5 DC MACRO	18462	18484	(Z)18716
Tokina AT-X 10-17mm f/3.5-4.5 AF DX fisheye	18456	18484	(Z)18717
Tokina AT-X 12-24mm f/4 AF PRO DX	NR		
Tokina AT-X 11-16mm f/2.8 AF PRO DX	NR		

NR = This lens not recommended for use with this port

(*1) +3 diopter needed for 9.25" dome port

(*2) Older pre 2008 port may not fit due to the oversized nature of this lens.

AQUATICA™ TYPE 1 FOR NIKON

Digital

For Nikon D300s, D2x, D40/D40x, D70/D70s, D100 & Fuji S2 Pro

8" dome port lens chart (# 18405)

Camera Lens	18405 8" dome Port		Zoom (Z) or Focus (F) GEAR
	EXTENSION	Dome Shade	
Nikon AF 10,5mm f/2,8 G ED DX	Not needed	18480	(F) 18699
Nikon AF 14mm f/2.8D ED	18456	18480	(F) 18693
Nikon AF 16mm f/2.8 D	Not needed	18480	(F) 18689
Nikon AF 18mm f/2.8	18456	18480	(F) 18680
Nikon AF 20mm f/2.8	Not needed	18480	(F) 18674
Nikon AF 24mm f/2.8 D	Not needed	18480	(F) 18686
Nikon AF 28mm f/2.8 D	Not needed	18480	(F) 18686
Nikon AF-S 10-24mm f/4G IF-ED DX	18462	18480	(F)18695/(Z)18696
Nikon AF-S 12-24mm f/4G IF-ED DX	18462	18480	(F)18695/(Z)18696
Nikon AF-S 14-24mm f/2.8G ED NIKKOR (*2)	18458	18480	(Z) 18722
Nikon AF-S 16-35mm f/4 G ED VR DX	18458	18480	(Z) 18728
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX (*1)	18462	18480	(Z) 18696
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX II (*1)	18462	18480	(Z) 18729
Nikon AF-S 17-35mm f/2,8D IF-ED	18457	18480	(Z) 18690
Nikon AF-S 17-55MM f/2.8 ED-IF	18457	18480	(Z) 18711
Nikon AF 18-35mm f/3.5-4.5 D IF ED	18453	18480	(Z) 18694
Nikon AF 18-55mm f/3.5-5.6G ED <u>VR</u>	18463	18480	(Z) 18721
Nikon AF 18-55mm f/3.5-5.6G ED II	18463	18480	(Z) 18718
Nikon AF 18-70mm f/:3,5-4,5 G ED (*1)	18453	18480	(Z) 18696
Nikon AF-S 18-105mm f/3.5-5.6G ED VR (*1)	18457	18480	(Z) 18727
Nikon AF 20-35mm f/2.8 D (*1)	18453	18480	(Z) 18675
Nikon AF 24-50mm f/3.3-4.5 D (*1)	18453	18480	(Z) 18673
Nikon AF-S 24-70mm f/2.8 G	18454	18480	(Z) 18722
Nikon AF-S 28-70mm f/2.8 D (*1)	18458	18480	(Z) 18723
Nikon AF 28-70mm f/3.5-4.5 D (*1)	18453	18480	(Z) 18673
Nikon AF 28-85mm f/3.5-4.5 (*1)	18462	18480	(Z) 18675
Sigma 10-20mm f/3.5 EX DC HSM	18462	18480	(Z) 18770
Sigma 10-20mm f/4-5.6 EX DC HSM	18456	18480	(Z) 18698
Sigma 14mm f/2.8 EX ASPHERICAL HSM	18462	18480	(F) 18697
Sigma 15mm f/2.8 FISHEYE	Not needed	18480	(F) 18715
Sigma 15-30mm f/3.5-4.5 EX DG	18457	18480	(Z) 18698
Sigma 17-70mm f/2.8-4.5 DC MACRO <u>HSM</u>	18462	18480	(Z) 18719
Sigma 17-70mm f/2.8-4.5 DC MACRO <u>HSM (OS)</u>	18462	18480	(Z) 18719
Sigma 17-70mm f/2.8-4.5 DC MACRO	18462	18480	(Z) 18716
Tokina AT-X 10-17mm f/3.5-4.5 AF DX fisheye	18456	18480	(Z) 18717
Tokina AT-X 11-16mm f/2.8 AF PRO DX	18453	18480	(Z) 18722
Tokina AT-X 12-24mm f/4 AF PRO DX	18453	18480	(Z) 18722

NR = This lens not recommended for use with this port

(*1) +3 diopter needed for 8" dome port

(*2) Older pre 2008 port may not fit due to the oversized nature of this lens.

AQUATICA™ TYPE 1 FOR NIKON

Digital

For Nikon D300s, D2x, D40x, D70/D70s, D100 & Fuji S2 Pro

9.25" dome port lens chart (# 18407)			
BK-7 coated mineral glass			
Camera Lens	EXTENSION	Dome Shade	GEAR Zoom (Z) or Focus (F)
Nikon AF 10,5mm f/2,8 G ED DX	Not needed	Built in	(F)18699
Nikon AF 14mm f/2.8D ED	18453	Built in	(F)18693
Nikon AF 16mm f/2.8 D	Not needed	Built in	(F)18689
Nikon AF 18mm f/2.8	18456	Built in	(F)18680
Nikon AF 20mm f/2.8	Not needed	Built in	(F)18674
Nikon AF 24mm f/2.8 D	Not needed	Built in	(F)18686
Nikon AF 28mm f/2.8 D	Not needed	Built in	(F)18686
Nikon AF-S 10-24mm f/4G IF-ED DX	18462	Built in	(F)18695/(Z)18696
Nikon AF-S 12-24mm f/4G IF-ED DX	18462	Built in	(F)18695/(Z)18696
Nikon AF-S 14-24mm f/2.8G ED NIKKOR (*2)	18458	Built in	(Z) 18722
Nikon AF-S 16-35mm f/4 G ED VR DX	18458	Built in	(Z) 18728
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX (*1)	18462	Built in	(Z) 18696
Nikon AF-S 16-85mm f/3.5-5.6 G ED VR DX II (*1)	18462	Built in	(Z) 18729
Nikon AF-S 17-35mm f/2,8D IF-ED	18458	Built in	(Z)18690
Nikon AF-S 17-55MM f/2.8 ED-IF	18457	Built in	(Z)18711
Nikon AF 18-35mm f/3.5-4.5 D IF ED	18453	Built in	(Z)18694
Nikon AF 18-55mm f/3.5-5.6G ED VR	18463	Built in	(Z) 18721
Nikon AF 18-55mm f/3.5-5.6G ED II	18463	Built in	(Z) 18718
Nikon AF 18-70mm f/:3,5-4,5 G ED (*1)	18453	Built in	(Z)18696
Nikon AF-S 18-105mm f/3.5-5.6G ED VR (*1)	18457	Built in	(Z)18727
Nikon AF 20-35mm f/2.8 D (*1)	18453	Built in	(Z)18675
Nikon AF 24-50mm f/3.3-4.5 D (*1)	18453	Built in	(Z)18673
Nikon AF-S 24-70mm f/2.8 G	18454	Built in	(Z) 18722
Nikon AF-S 28-70mm f/2.8 D (*1)	18458	Built in	(Z) 18723
Nikon AF 28-70mm f/3.5-4.5 D (*1)	18453	Built in	(Z)18673
Nikon AF 28-85mm f/3.5-4.5 (*1)	18462	Built in	(Z)18675
Sigma 10-20mm f/3.5 EX DC HSM	18453	Built in	(Z)18770
Sigma 10-20mm f/4-5.6 EX DC HSM	18453	Built in	(Z)18698
Sigma 14mm f/2.8 EX ASPHERICAL HSM	18462	Built in	(F)18697
Sigma 15mm f/2.8 FISHEYE	Not needed	Built in	(F)18715
Sigma 15-30mm f/3.5-4.5 EX DG	18457	Built in	(Z)18698
Sigma 17-70mm f/2.8-4.5 DC MACRO HSM	18462	Built in	(Z)18719
Sigma 17-70mm f/2.8-4.5 DC MACRO HSM (OS)	18462	Built in	(Z)18719
Sigma 17-70mm f/2.8-4.5 DC MACRO	18462	Built in	(Z)18716
Tokina AT-X 10-17mm f/3.5-4.5 AF DX fisheye	18456	Built in	(Z)18717
Tokina AT-X 12-24mm f/4 AF PRO DX	18453	Built in	(Z)18722
Tokina AT-X 11-16mm f/2.8 AF PRO DX		Built in	
NR = This lens not recommended for use with this port			
(*1) +3 diopter needed for 9.25" dome port			
(*2) Older pre 2008 port may not fit due to the oversized nature of this lens.			